

## CCT DIMMER CONTROLLER FOR 6 ZONES

## SEQUENCERS FOR LEDS

Ref: 41.018

Controller

### Features

- Compact size with simple and easy-to-use interface.
- Accurate and smooth colour temperature and brightness adjustment for warm white and cold white.
- 256 level brightness adjustments for each white to archive millions of colour temperatures.
- Smooth dimming without any flickering from 0.1% to 100% enables the dimmer controller to archive millions colours.
- Control 6 different zones separately or synchronously with endless receivers in each zone.
- Save kelvins / scenes for each zone.
- Control distance around 20-30m.
- To work with power repeater to expand output unlimitedly.

Compatible with controller:

- 41.019




voltage



IP20

Voltage (V)	3V (1 units of CR2025 not included)
Frequency	868/915/434MHz
Control	6 zones
Signal distance	20 - 30m
Waterproofing	IP20
Working temperature	0°C / 40°C
Measurements	136.3x38.9x10.7mm
Packaging	1 unit
Guarantee	2 years

 Approved by: 

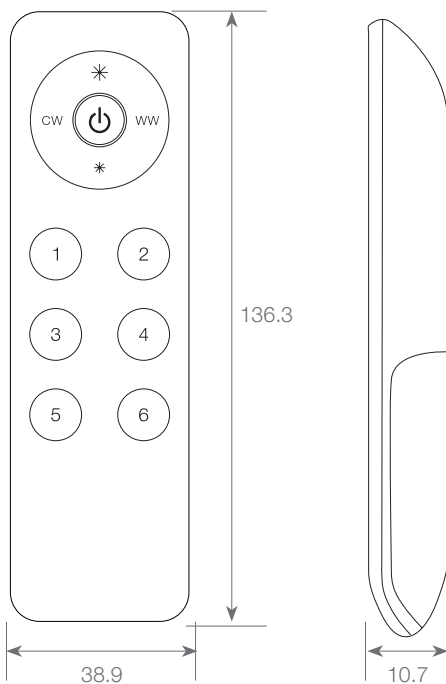


**BARCELONA**  
C/ Carles Buhigues, 13  
08420 Canovelles  
Info@luznegra.net  
Tel: +34 938 402 598


**MADRID**  
C/ Adaptación, 27  
28906 Getafe  
centro@luznegra.net  
Tel: +34 916 416 081

**PARIS**  
113 Avenue Joffre  
77450 Esbly  
france@luznegra.net  
Tel: +33 (0) 160 426 585

**Remote button diagram:**

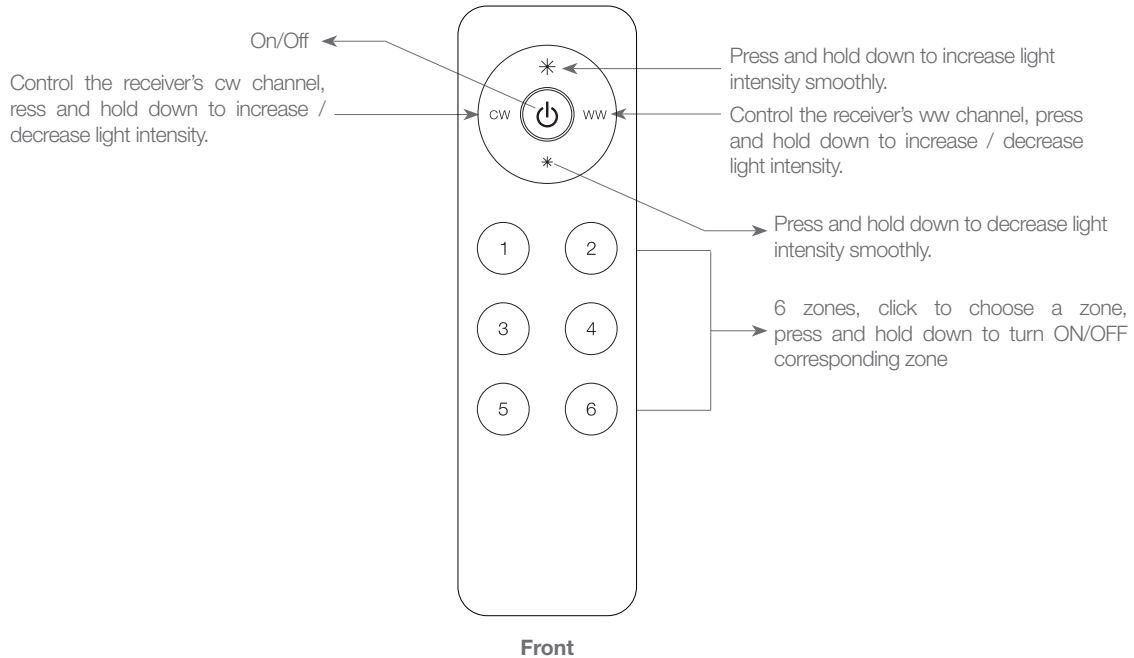 

**Back**

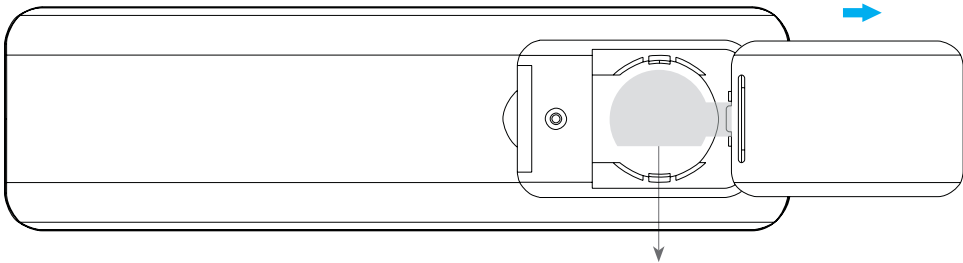 


Note: before the first use, please remove the protective film on the battery.


**Safety & warnings**

 - This device contains a button lithium battery that should be stored and disposed of properly.
- DO NOT expose the device to moisture.

### Pair with RF receiver

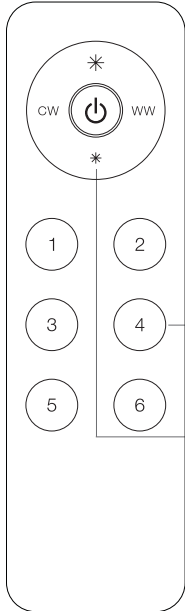

 Step 1: do wiring of the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

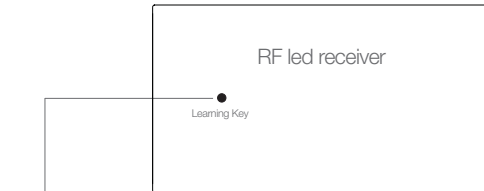

Step 2: click the "Learning Key" button on RF receiver to set it into pairing status

Step 3: choose and click a zone number (e.g. zone 4).


Step 4: click any of the four buttons, \* \* cw ww led lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

After pairing, choose and click one or multiple zone numbers, then press and hold any of the four buttons \* \* cw ww to operate.


Note: one receiver can be paired with max 8 remote controls.

### If you use multiple receivers, you have two options:

 Option 1: have all the receivers in the same zone, like zone 1.

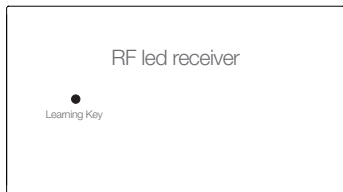


Zone 1

 

Remote control

 Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4.

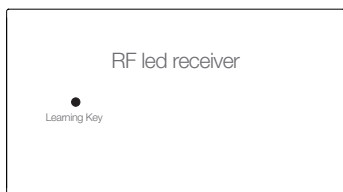


Zone 1



Zone 2



 Zone 3



Remote control