

# Circular remote control - 1 zone

Ref: 41.100

**Features:**

- Control method RF 2.4GHz
- Low power consumption.
- Long distance transmission.
- Strong anti-interference and fast communication rate.
- Control of colour, colour temperature, saturation and brightness of the light.
- Compatible with: 41.026 / 41.130 / 41.131



**Technical characteristics**

**Technical data**

Voltage	3V
Transmitting power	6dBm
Zone	1
Degree of protection	IP20
Standby power	20uA
Control method	RF 2,4GHz
Memory saver	SI
WIFI	No
Bluetooth	No

**Services**

 
Colour	Black
Type of supply	AAA battery 2pcs (not included)
Apt for	Interior
Fixing	Adhesive / magnético
Control distance	30m

**Temperatures and operating conditions**

Working temperature	-10°C / 40°C
---------------------	--------------




## Circular remote control - 1 zone

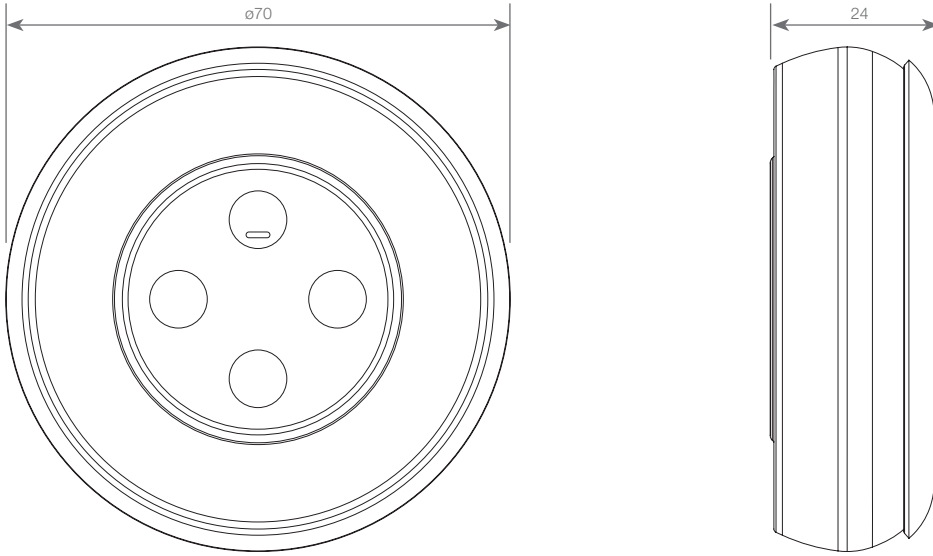


### Dimensions and weight

 
Length	ø70mm	Height	ø70mm
Width	24mm	Weight	0,081gr

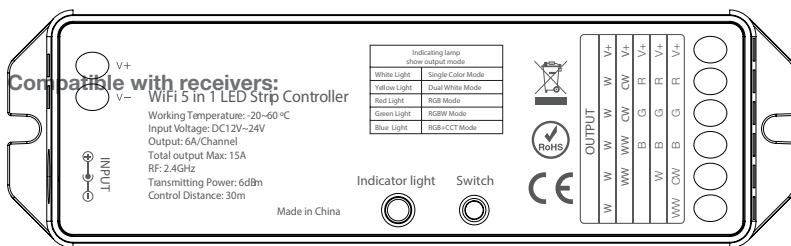

 41.026

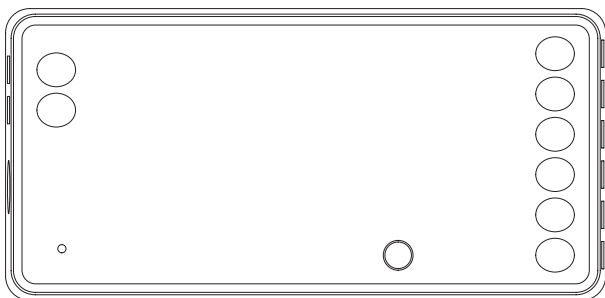

 
41.130

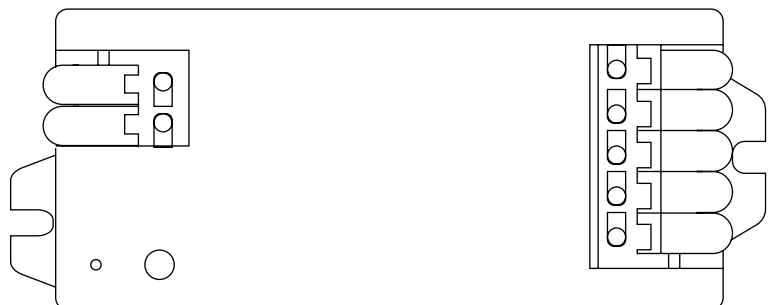

41.131

# Circular remote control - 1 zone

  
## Button diagram:

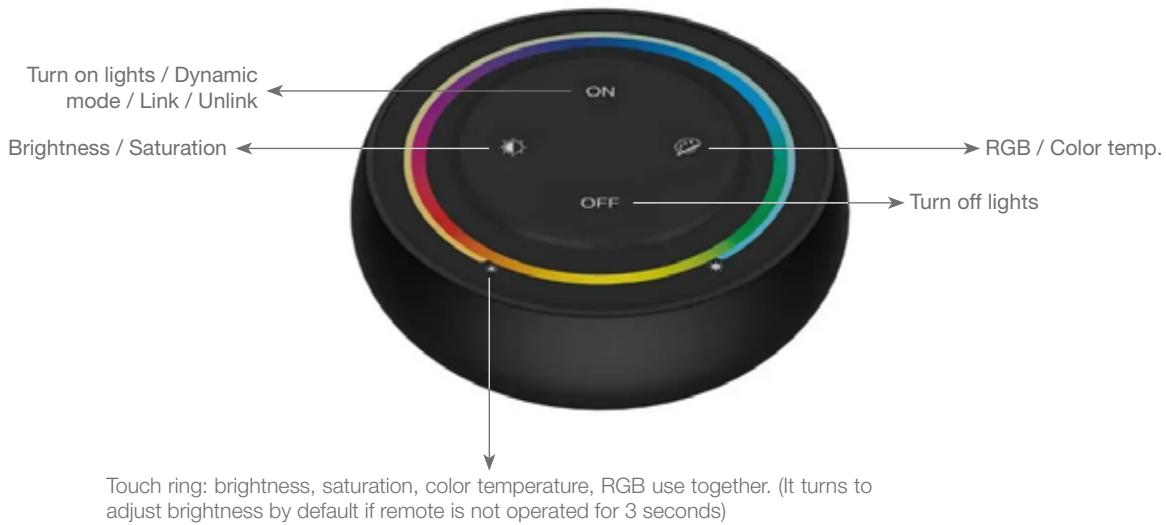







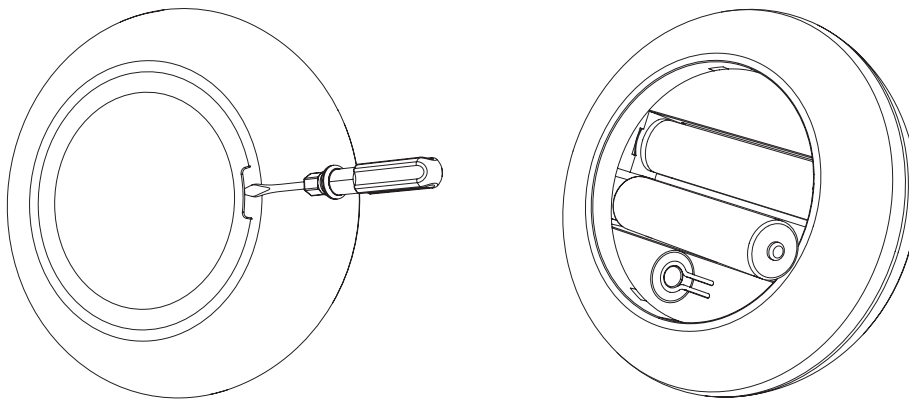



## Install Battery:

Note: 2\*AAA Battery need to buy seperately

1. Open battery cover behind remote.
2. Install battery correctly and close battery cover.



## Function description:

- Adjust RGB:
  - Short press  key twice in succession, and then touch  to adjust RGB.
- Adjust saturation:
  - Press  key twice in succession, and then touch  to adjust color saturation of lighting. (Note: only in RGB mode).
- Adjust color temperature:
  - Short press  key once, then touch  to adjust color temp.
- Adjust brightness:
  - Short press  key once, then touch  to adjust brightness.
- Dynamic mode switching:
  - Long press  key until indicator light flashes twice, then short press  key to cycle switch.  
(Note: it will exit automatically if no operation after 3 seconds)

# Circular remote control - 1 zone


## Linking Code / Unlinking Code Instructions:

You can control lights after linking remote with light.

### • Linking Code Instructions:

 
1. Switch off light after 10 seconds, then switch on again.
2. Short press "ON" button 3 times within 3 seconds when light on.
3. Lights blink 3 times slowly means linking is done successfully.



 Linking failed if light is not blinking slowly, please follow above steps again. (Note: lights that have linked can't link again).

### • Unlinking Code Instructions:

1. Switch off light after 10 seconds, then switch on again.
2. Short press "ON" button 5 times within 3 seconds when light on.
3. Lights blink 10 times quickly means unlinking is done successfully.

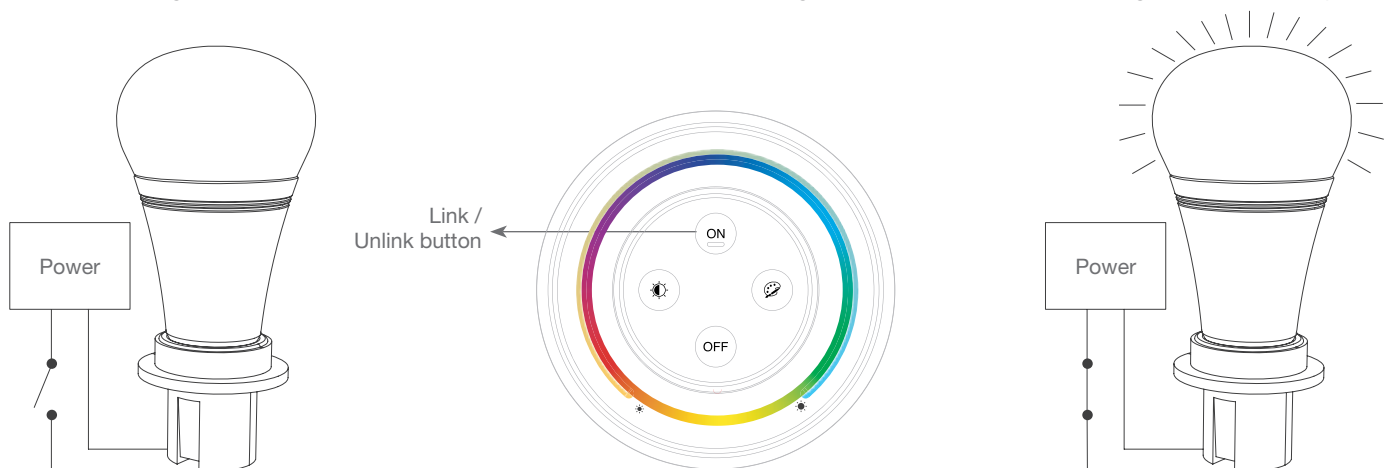

 Unlinking failed if light is not blinking quickly, please follow above steps again. (Note: lights haven't linked that don't need to unlink).


## Attention

 1. If indicator light flashes quickly when using, please replace battery in time. Do not use poor quality battery in case of leaving out liquid to damage remote.
2. Do not use remote in a large-scale metal area or an area with strong electromagnetic waves nearby, otherwise will affect communication distance seriously.


## Circular remote control - 1 zone

### Wall mounting:

1. Peel off the adhesive from the rear base.

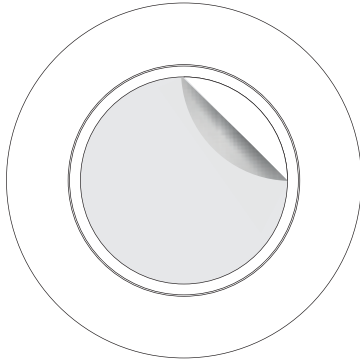

 2. We stick the rear part of the base to the surface where we want to place it.

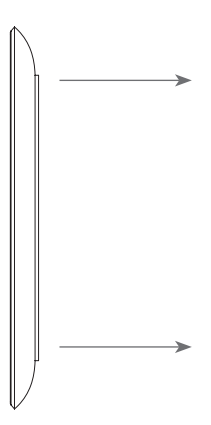

3. The controller will automatically snap into place on the magnetic base.

