

Wifi controller - 5 channels

Ref: 41.071

Features:

- Receiver 5 in 1 (monocolour, TW, RGB, RGB+W, RGB+TW)
- Low energy consumption
- From the APP, you can control wireless attenuation, remote control, group control, scene control, timing control, music movement, biological rhythm, sleep plan, activation plan...etc.
- Compatible with: Amazon Alexa, Google Assistant, APP Smart life and APP MiBoxer
- Compatible with controllers: 41.025 / 41.030 / 41.031 / 41.089 / 41.100



Technical characteristics

Technical data

Power	180W (12V) / 360W (24V) / 720W (48V)
Voltage	12V / 24V / 48V
Degree of protection	IP20
Channels	5
Maximum load	15A
Amps	6A x channel
Control	RF 2.4GHz / Wifi / voice control / remote control

Features

Colour regulation	Yes
Feed type	Via cable
Apt for	Indoor
Fixing	Tape / screws (not included)
Signal detection distance	30m
Maximum signal reception distance	30m clear, signal is repeated between them
Working temperature	-10°C / 40°C




Product characteristics

 Group control	 Adjustable colour temperature	 Faint / full	 Time setting / aggressive account / turn on / turn off
 Supports the rhythm of music	 2.4G RF wireless transmission technology	 Remote control / control distance 30m	 Sleep plan / wake up
 The Wi-Fi wireless control accepts long-range control	 Control of the smartphone APP	 Accepts third party voice control	

Warning

1. This product should be debugged and installed by professionals.
2. Please check whether the output voltage of the power supply meets the requirements of the product voltage range.
3. The product is not waterproof, please install it in a waterproof box when installed outdoors.
4. Before switching on the power, please ensure that all wiring is correct, so as not to cause damage to the devices.
5. In the case of failure, please do not attempt to manipulate without the help of a specialised technician.

Wifi controller - 5 channels

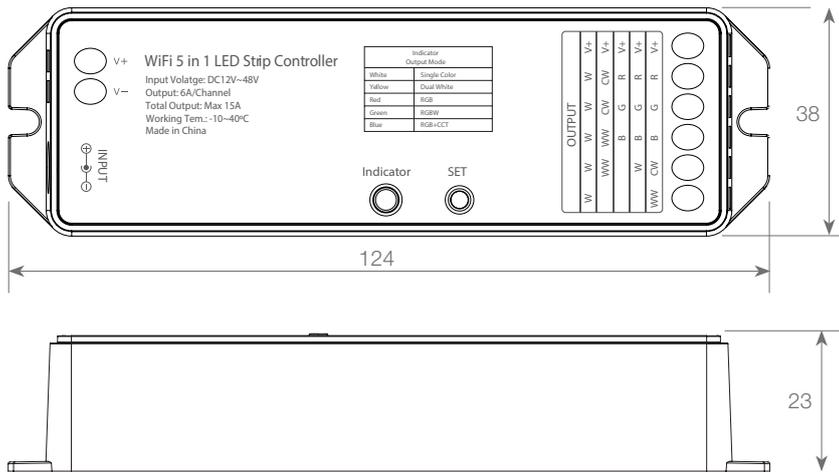

Dimensions and weight


Length	124mm	Height	23mm
Width	38mm	Weight	65gr

Configure the output mode:

Set the correct output mode according to the type of LED to be installed and press the "SET" button continuously to change the output mode.

See legend:

Indicating lamp colour	Output mode
White light ○ ○	Single colour mode
Yellow light ● ○	Dual white mode
Red light ● ○	RGB mode
Green light ● ○	RGBW mode
Blue light ● ○	RGB+CCT mode

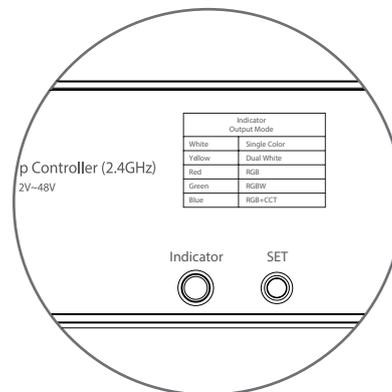


Compatible controls and panels:




41.025



41.089

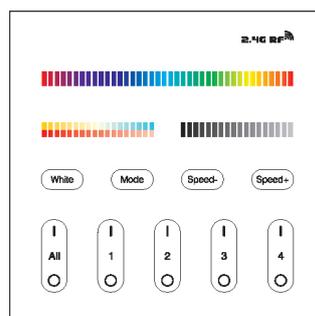

41.030 / 41.031

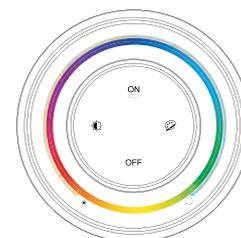

41.100

Wifi controller - 5 channels

Auto-transmitting function:


Different controllers can work synchronously when they are started at different times, controlled by the same remote, under same the dynamic mode and with the same speed.

Programming the receiver 41.026 with the controller 41.025:

Once we insert the batteries, we must disconnect the 41.026 for 10 seconds. Then we reconnect and within 3 seconds we must press the ON button 3 times for the desired area (the product has 8 areas).


Once the link has been created the product will start to flicker, meaning that it has been done correctly. If this does not happen, then repeat the process.

To unlink the remote control we have to disconnect the controller 41.026 for 10 seconds and connect again within 3 seconds. We press the ON button 5 times, for the zone where it was connected.

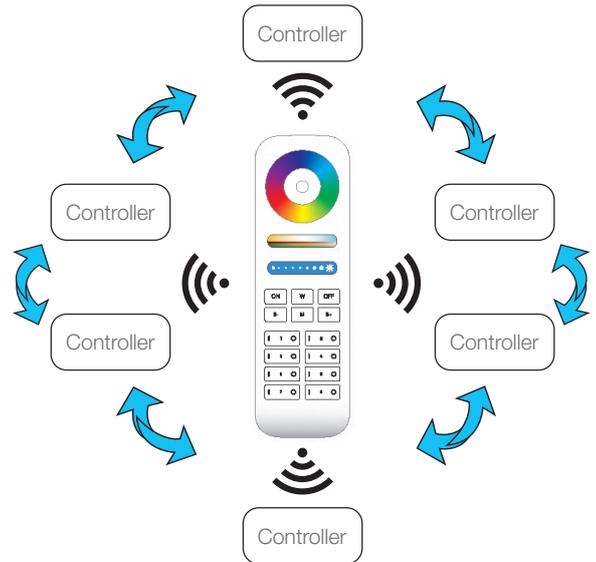

Automatic transmission and synchronisation (remote control only):

- **Remote automatic signal transmission:** a controller can transmit the remote-control signals to another controller within 30m, provided there is a light within 30m. The distance of the remote control can be limited.
- **Dynamic Auto Sync Modes:** multiple lights can be synchronised if they are in the same dynamic mode and are linked to the same remote control (the distance between each light is 30m).

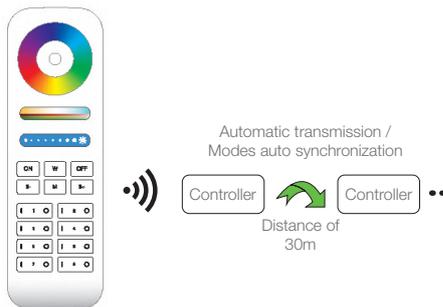

Dynamic mode table selection (for remote control only):

- **Select dynamic mode table 1:** while the light is in static mode, briefly press the “S+” button 5 times quickly until the blue light flashes slowly 3 times.
- **Select dynamic mode table 2:** while the light is in static mode, briefly press the “S-” button 5 times quickly until the yellow light flashes slowly 3 times.

Note: there are 9 default modes for RGB, RGB+W and RGB+TW formats.

High frequency PWM / low frequency switching (only for remote control):

- **Switch to high frequency:** press the “OFF” button once in three seconds and press the “ON” button 5 times. It is successfully activated once the led light flashes 2 times quickly.
- **Switch to low frequency:** press the “ON” button once in three seconds and press the “OFF” button 5 times. It is successfully activated once the led light flashes slowly 2 times.

The “do not disturb” mode is turned on and off (enabled by default):

Turn on “do not disturb”:

- 2.4G RF remote instructions for turning on and off:
 - **Turn on “do not disturb” mode:** press “OFF” button 3 times in three seconds and press “ON” button 3 times, successfully activating once LED light flashes 4 times quickly.
- Attention: “do not disturb” mode is enabled:
 1. When the light is off (for example: use the APP or remote to turn off the light).
The light is at “off” once the power is turned off and back on. (The user must turn the power off and on 2 times to activate the is or use the APP / remote to activate the light).
 2. When the light is on
The light is at “on” once it turns the power off and on once.

Wifi controller - 5 channels

Disable “do not disturb”:

- Press the “ON” button 3 times in three seconds and press the “OFF” button 3 times. If correct the led light flashes 4 times slowly.
 Attention: the light is always at “on” if you turn the power on and off once the user closes the “do not disturb” mode.

Control instructions for smartphone applications

- Network configurator (does not support 5G routers):


1. Download and install the “Tuya Smart” APP: search Apple or Google Store for “Tuya Smart” or scan the QR code to download and install the APP.

Open the APP and click the “sign up” button to create an account while using it for the first time. If you already have an account log in directly




2. Network settings:

- Connect the controller and power supply.
- Confirm that the light flashes quickly (blinking 2 times per second).
 If the indicator light is not in fast blinking state, there are two ways to enter:
 - Hold down the “SET” key until the indicator light flashes quickly.
 - Turn the controller off and on 3 times..
- Connect your phone and Wi-Fi network at a frequency of 2.4GHz.
- Open the application home page and click the add “+” button in the upper right corner.
- Click on “lighting” on the left side of the page and then click on “light source (BLE+Wi-Fi)”.
- Follow the application instructions to complete the configuration

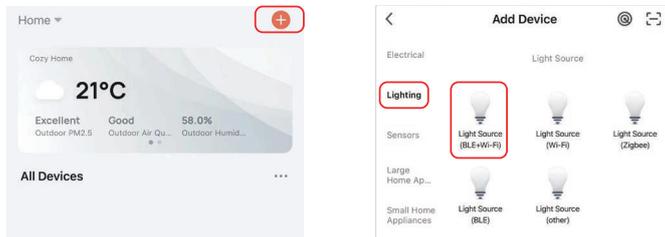

- Application to enable and disable “do not disturb” mode (enabled by default):

- Click on the light that should be configured or control the group (click on “more”).
- Click on “power-on behaviour” (turn on or off).

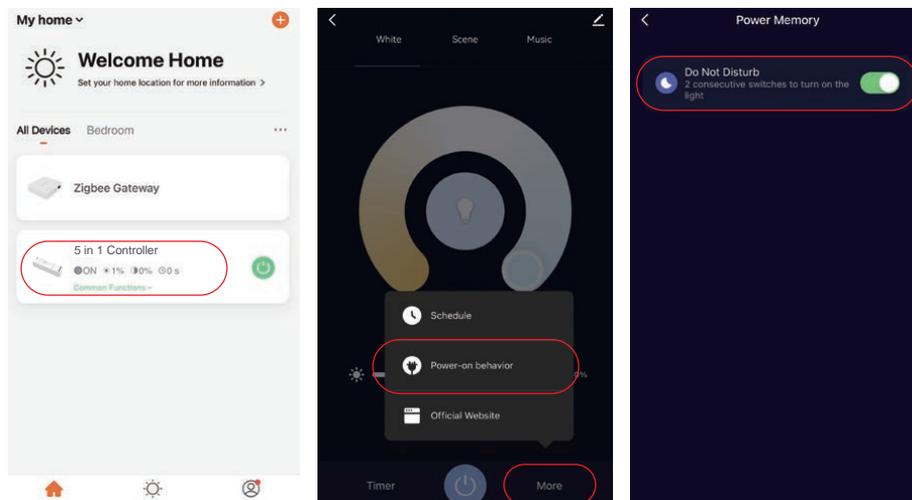


Wifi controller - 5 channels

Voice control instructions with Alexa

• Add the device to the “Tuya Smart” APP then follow the following steps:


1. Open the Alexa APP.
2. Click on “more” at the bottom right corner.
3. Click on “Skills&Games”.

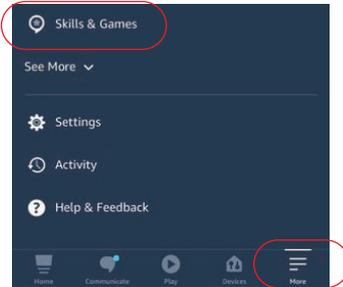

4. Click on “ ” at the top right corners.
5. Write in search “Smart life”.




6. Click on “Smart life”, and follow the instructions to finish the configuration and start voice control.

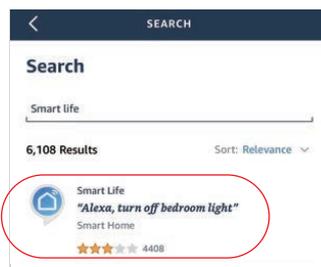


Voice control instructions with Google Home

• Add the device to the “Tuya Smart” APP then follow the following steps:

1. Open the Google Home APP.
2. Click on “+” at the top left corner.

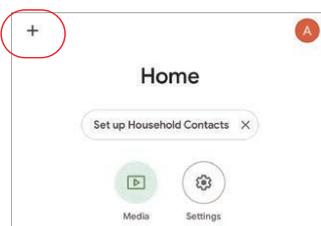


3. Haga clic en “Set up device”.

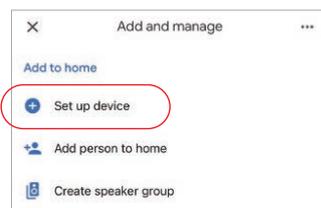

Wifi controller - 5 channels


4. Click on "works with Google".

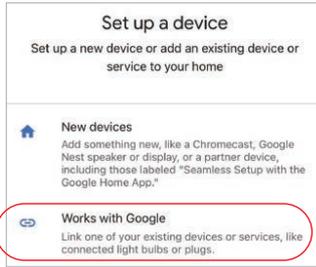

5. Click on "Q" at the top right corner.


6. Write in search "smart life".

7. Click "smart life", and follow the instructions to finish the setup and start voice control.

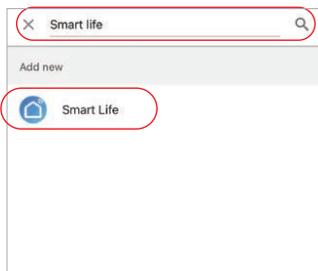


Type of connection:


Monocolour:

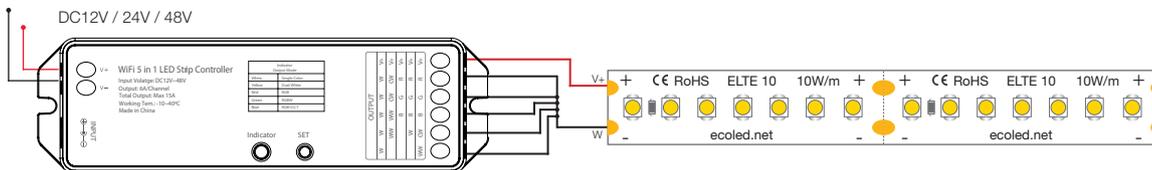

TW (Tunable White):

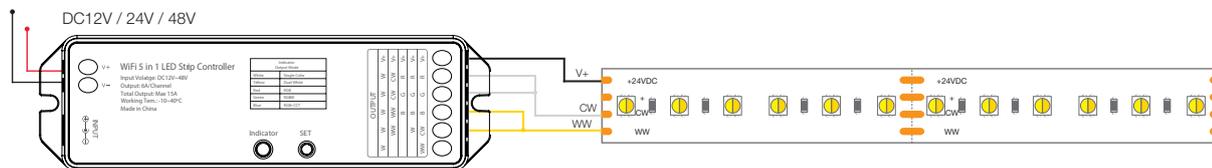


RGB:

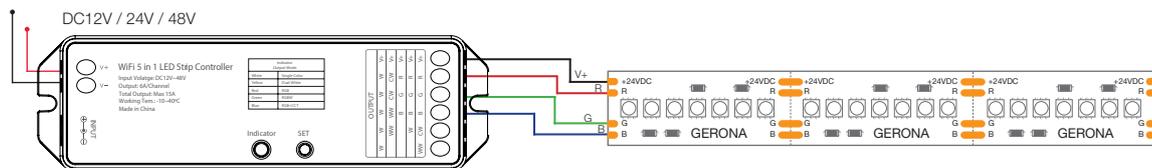

Wifi controller - 5 channels

Type of connection:

RGB+W:

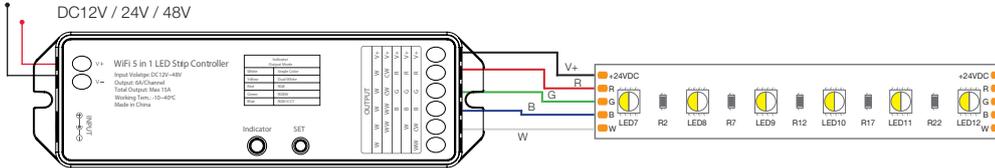

RGB+TW:

